

# PARTS LIST

		with S
		PA
PART#	<u>KEY #</u>	DESCRIPTION
922-581563		. F7A Body shell
		& all detail part
922-581564		. F7A Body shell
022 581566	10	& all detail part . F7A Body shell
		8. all datail nari
922-581571	1D	. F7A Body shell
		& all detail part . All windows & I
N/A		
		stand-offs, horr
000 504040	0	cab interior par . F7A frame, A-f
922-581610	2 20	. F7A frame, A-f . F7A/B Large &
		. F7A LEDs & ho
022 001000		(sound version
922-581601	4D	. F7A PCB w/LE
		(sound versior
922-581576		. F7A/B Universa
000 504570	CD	(1 set - enough . F7A/B Motor w
922-581580	7	and universal s . F7A/B Fuel tan
922-581581	8A	. Couplers, com
		. Blomberg truck
		sideframe deta
922-581584	10	. Blomberg sidef
022 501505	11	(4 sets - enoug . Geared wheels
322-001000	11	(40 scale inch )
922-581602	12	(40 scale inch v . F7A/B Twin sp
		· -F

#### **TO ORDER REPLACEMENT PARTS:**

- 1. Identify parts in drawings on exploded views of chassis and body pages.
- 2. Locate part number above.
- 3. Contact Walthers at 1-800-487-2467 to place your order.

### **PROTO 2000 HOF7A LOCOMOTIVE** vith Sound & DCC **ARTSLIST**

- ell with dynamic brakes, without steam generator
- rts shown with body shell \*
- ell with dynamic brakes, with steam generator
- rts shown with body shell \*
- Il without dynamic brakes, with steam generator rts shown with body shell \*
- ell without dynamic brakes, without steam generator rts shown with body shell \*
- lenses, pilots, handrails, grabirons & ladder rns, antennas, etched grilles, and other exterior and
- irts (enough parts to fully detail the body)
- frame & screws (sound version)
- small PCB with wires and screws
- nolder and screws (for w/o mars light)
- EDs, holder & screws (for w/mars light)
- sal joints & worm cover
- h for one loco)
- with single flywheel, motor mounts & screws sockets (for version with sound)
- inks (2), hanger brackets, pipes and screws nplete (1 short shank & 1 standard shank) ck with gears, worm cover, sideframes and all
- ails (1 assembled)
- frame set and all sideframe details
- igh for 2 trucks)
- set
- wheels, helical gear, bearings) (4)
- beakers with wires and screws

## F7 A-Unit Locomotive

(with Sound & DCC)



#### CONGRATULATIONS!

You have just purchased one of a series of the finest running, most detailed model locomotives available today. It is equipped with a diecast chassis and a totally redesigned state of the art drive system that is second to none. Your new PROTO 2000 HO Scale F7A diesel locomotive has been carefully handassembled and tested before leaving our modern factory. Additionally, it has been engineered to provide virtually trouble-free service and operation.

#### **REMOVAL INSTRUCTIONS**

- Carefully remove the locomotive from its protective foam packaging.
- · Remove the end protectors by unscrewing the phillips head screws on the bottom of the chassis at each end
- Using the screws you just removed, align the couplers and coupler boxes as shown in the exploded view and tighten the screws to the chassis
- Important: Retain this package and all packing materials in case you need to ship locomotive for servicing.

**Break-In**. To break-in your F7A, operate it at varying speeds, starting and stopping it frequently while running it in both forward and reverse for an hour or so. This will allow the motor brushes to "seat" and adjust to ensure improved operation for the life of your locomotive.

MAINTENANCE

# LUBRICATION AND CLEANING Frequency

As with any precision mechanical equipment, occasional lubrication and maintenance is required for optimum performance. PROTO 2000 locomotives, with their precision-engineered reduction gears, motor and chassis need only occasional, careful lubrication and cleaning.

- Models used infrequently or not at all should not be lubricated more often than once a year. Excessive amounts of lubricant can migrate to the driver tires and cause reduced tractive force and grime on rail heads.
- Models which are run often and pull long consists on grades should be inspected and lubricated every two or three months.

#### Instructions

**Bearing Areas.** A small patch of cloth held with tweezers should be used to clean bearing areas before lubrication. With the model upside down, place a drop of light oil at each wheel bearing. *Do not over lubricate.* 


**Worm Gears.** By extracting the body shell and metal chassis weights the snap-on covers over the drive worms can be removed. Light grease should be applied to the worm gear with a toothpick.

**Idler Gears.** A drop or two of light oil can also be applied to the plastic idler gears below the worm gear. As they are made from slippery plastic, the gears require little maintenance.

## DYNAMIC BRAKE SOUND

Your A-unit comes with all sounds activated, including the dynamic brake sound. We have provided this as a choice for modelers who like the sound of dynamic brake operation, even if their model does not come equipped with that feature.

You may choose to reduce the volume or to mute (turn off) this sound if the prototype for your model does not have dynamic brakes. Check the Operations manual for instructions.

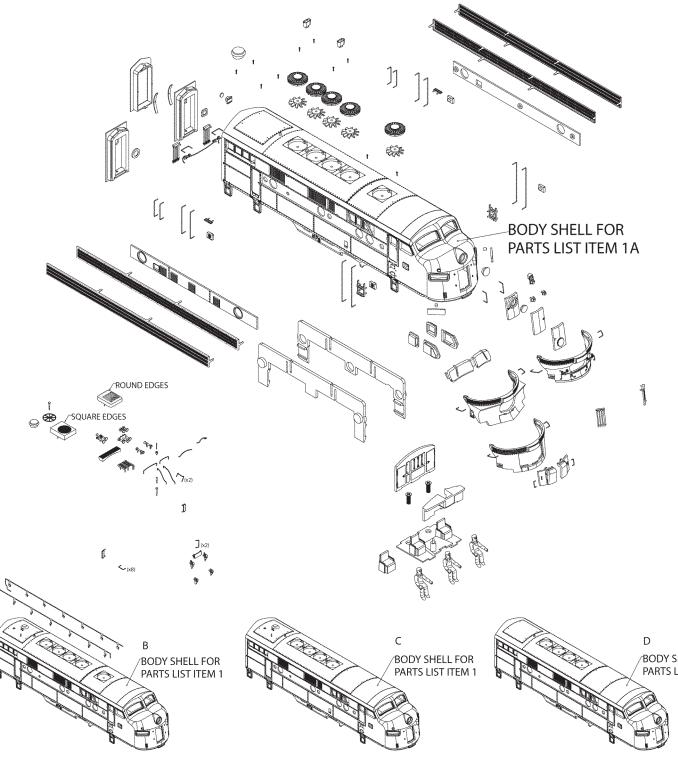

EXPLODED VIEW OF BODY

#### FOR WARRANTY INFORMATION AND ASSISTANCE CALL TOLL-FREE: 1-800-773-9350







© 2008 Wm. K. Walthers, Inc. 5601 W. Florist Ave. • Milwaukee, Wisconsin 53218 www.walthers.com

> RM582188 022008 2nd Release 920-40631/40660

D /BODY SHELL FOR PARTS LIST ITEM 1