


# NCE Power Cab and Mini-Panel Programming Hookup

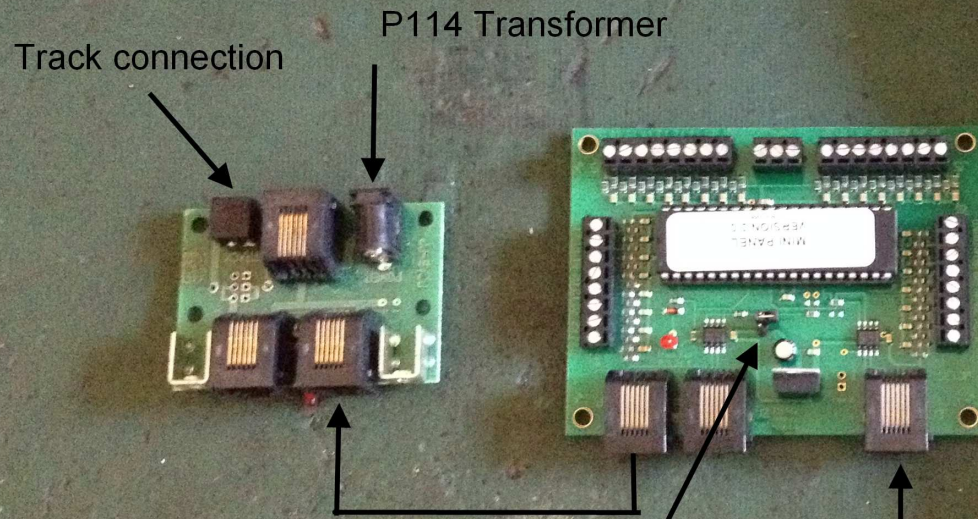

Before connecting cab bus cable:  
Install setup jumper to force board into programming mode  
-Note- remove for normal operation

